RadioShack

Start Here

12-519

Quick Start

All-Hazards Weather Alert Clock Radio with Skywarn

See User's Guide for complete instructions

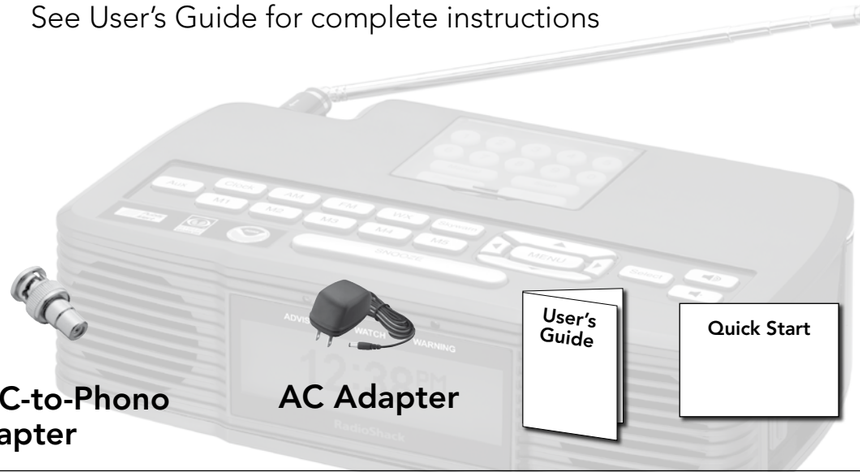

Package contents

Radio

BNC-to-Phono Adapter

AC Adapter

① Install six AA Alkaline Batteries and Connect to AC Power

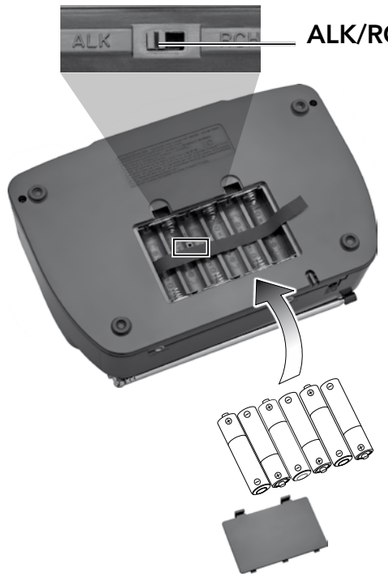

Note: *To use rechargeable batteries for backup, refer to page 6 of User's Guide.*

② Set the Clock

1. Press and hold.

2. Press to set the hour, minute and AM/PM.

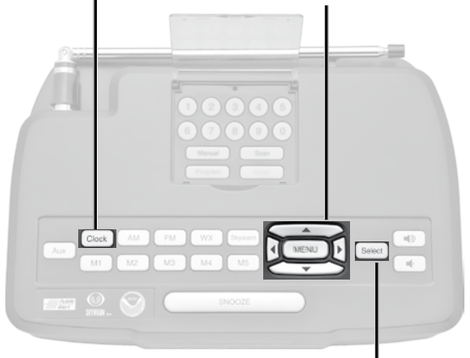

3. Press **CLOCK** or **SELECT** to confirm and exit.

③ Tune to AM, FM, WX or Skywarn

1. Press to select a band.

2. Press ▲ or ▼ to tune a station or channel.

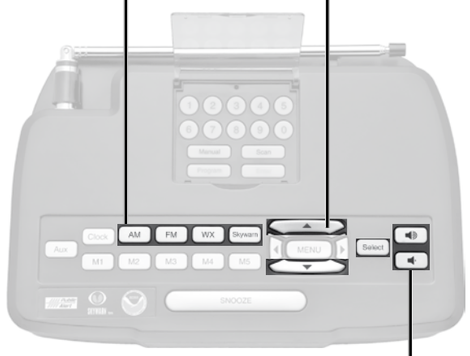

3. Press to adjust the volume.

④ View Weather Alert

The latest alert description scrolls on the display. Press◀ or ▶ to view them in order.

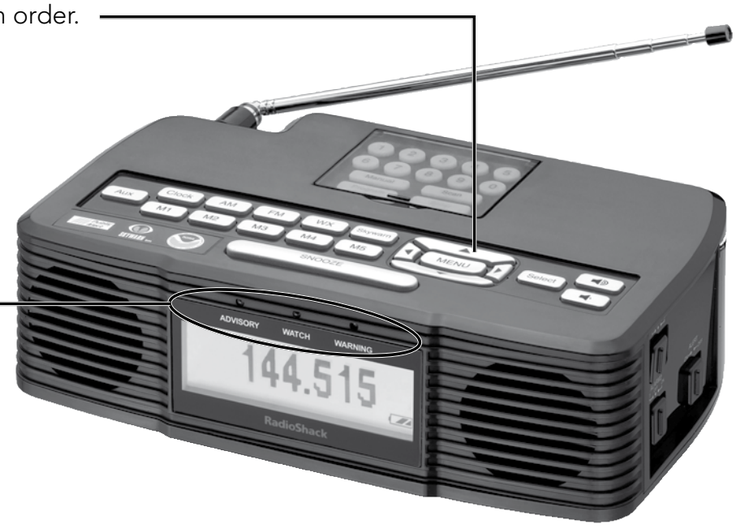

ADVISORY/WATCH/WARNING

When an alert is in effect, the corresponding alert indicator flashes for 60 seconds and lights for the duration of the alert.

©2009. ***RadioShack*** Corporation.
All rights reserved. ***RadioShack*** and ***RadioShack.com*** are trademarks used by ***RadioShack*** Corporation.

AO0358AAA1
Printed in China 05A09 12-519